

CLUTCH PEDAL INSPECTION


XSUS10W05

Clutch Pedal Height Inspection

1. Measure the distance from the upper surface of the pedal pad to the cabin carpet.

Pedal height

175—180 mm {6.89—7.09 in} (With carpet)

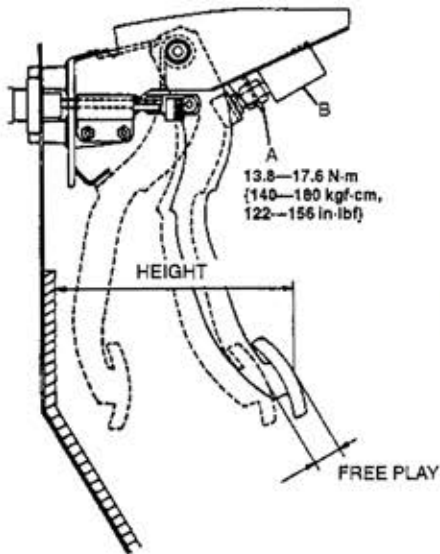

Clutch Pedal Free Play Inspection

1. Depress the clutch pedal by hand until clutch resistance is felt.

Free play

0.6—3.1 mm {0.02—0.12 in}

Total free play

5—13 mm {0.20—0.51 in}

2. Adjust the free play as necessary: (Refer to 05—10 CLUTCH PEDAL ADJUSTMENT, Clutch Pedal Free Play Adjustment.)


SUPERMIATA.COM

CLUTCH PEDAL ADJUSTMENT

XSUS10W06

Clutch Pedal Height Adjustment

1. Disconnect the clutch switch connector.
2. Loosen locknut A and turn clutch switch B until the height is correct.
3. Tighten locknut A.

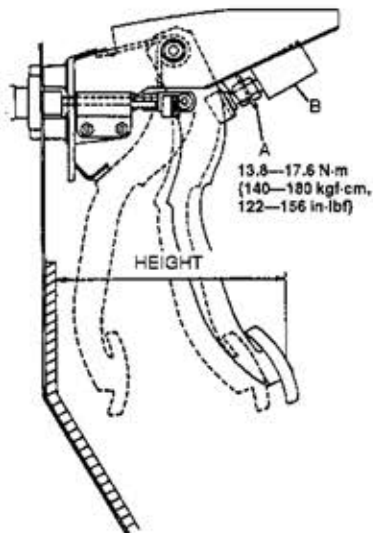

XSUS10WA4


Tightening torque

13.8—17.6 N·m
{140—180 kgf·cm, 122—156 in·lbf}

4. After adjustment, inspect the free play.

Clutch Pedal Free Play Adjustment

1. Loosen locknut C and turn push rod D until the free play is correct.
2. Verify that the disengagement height as measured from the upper surface of the pedal pad to the carpet is correct when the pedal is fully depressed.

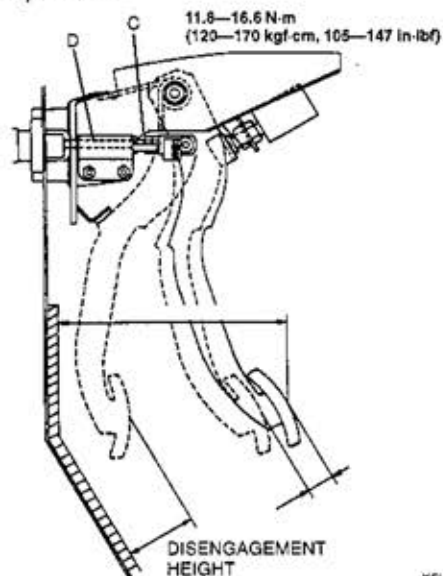

XSUS10WA5

Minimum disengagement height
68 mm {2.68 in} (With carpet)

3. Tighten locknut C.

Tightening torque

11.8—16.6 N·m
{120—170 kgf·cm, 105—147 in·lbf}